


* convert to IVI to

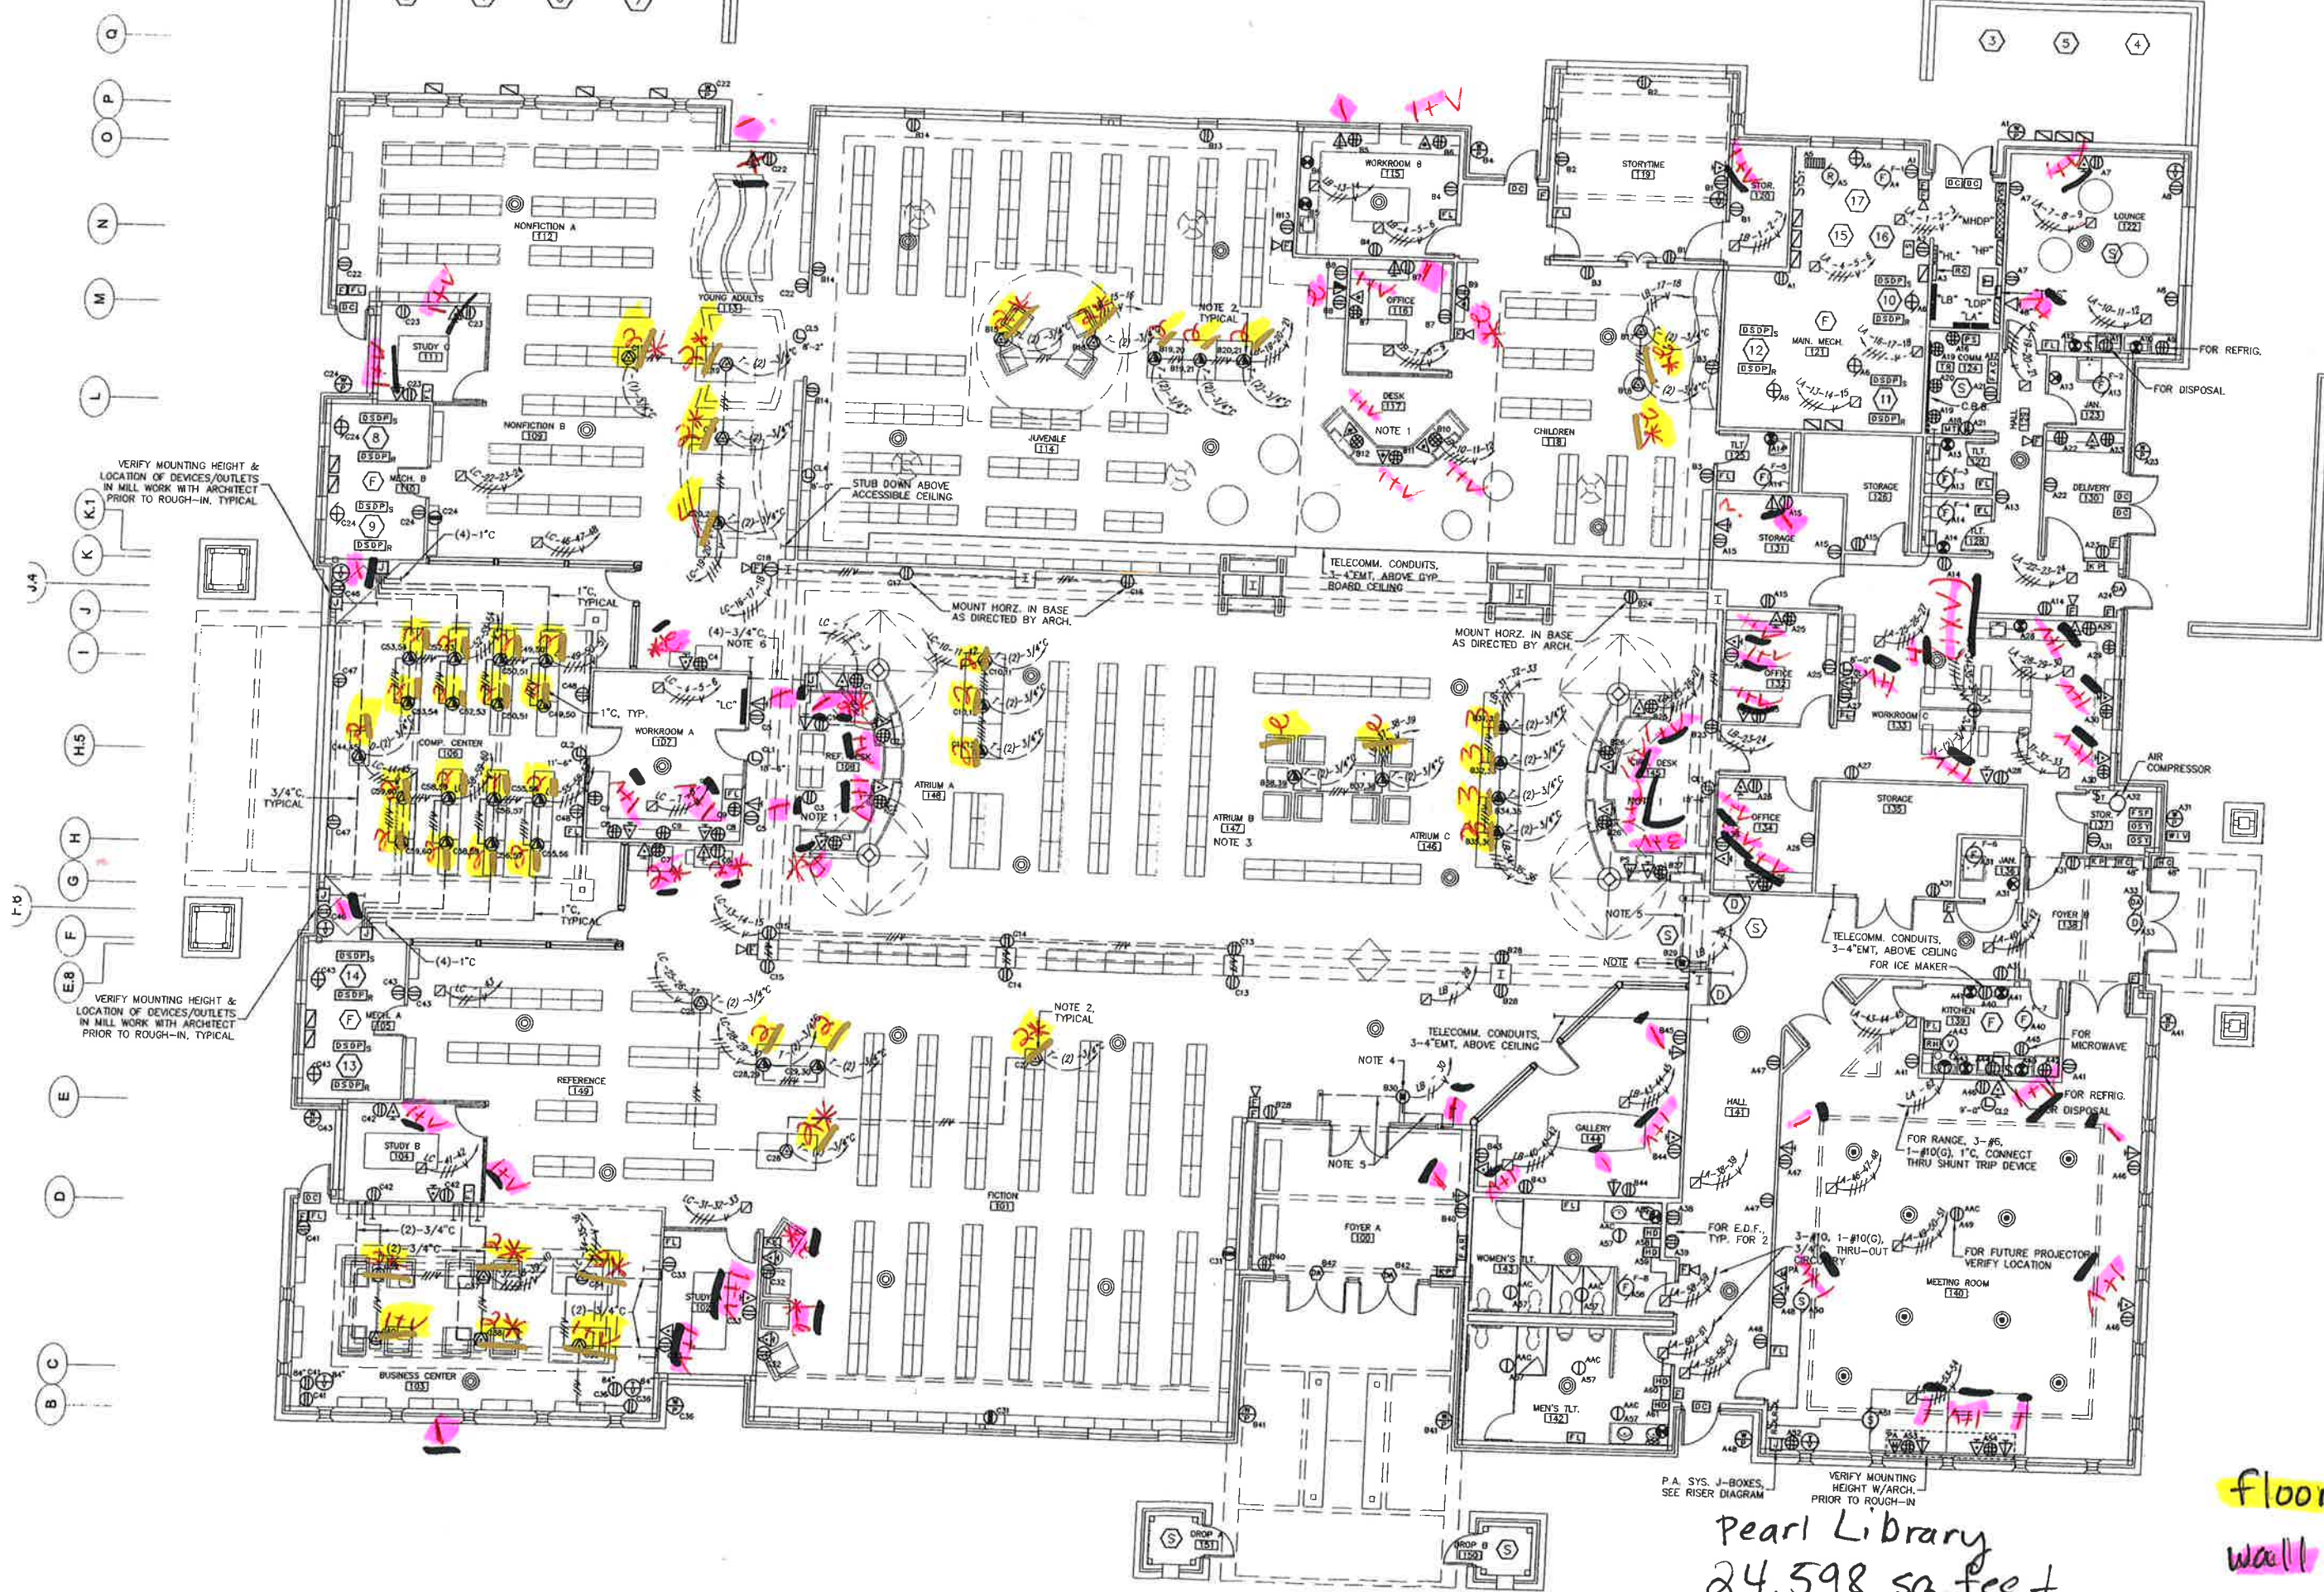

- POWER FLOOR PLAN:**
1. RECEPTACLES, OUTLETS, MOUNTED WITHIN MILL. WE COORDINATE INSTALLATION
 2. VERIFY EXACT LOCATION WITH ARCHITECT PRIOR TO
 3. DO NOT STUB TELECOMM. IN ATRIUM SPACE. CONDUIT AREA THAT HAS A CLEAR
 4. BOOK SECURITY EQUIP. CONNECTION LOCATIONS TO ROUGH-IN.
 5. PROVIDE 1/4" CONDUIT 1 1/4" CONDUIT BETWEEN COORDINATE INSTALLATION ROUGH-IN.
 6. ROUTE CONDUITS FROM J- TO WALL AND STUB UP A
 7. BETWEEN COLUMN LINES E ROUTED IN ATTIC SPACE (LAY-IN CEILING) IN ORDER

VERIFY MOUNTING HEIGHT & LOCATION OF DEVICES/OUTLETS IN MILL WORK WITH ARCHITECT PRIOR TO ROUGH-IN. TYPICAL

VERIFY MOUNTING HEIGHT & LOCATION OF DEVICES/OUTLETS IN MILL WORK WITH ARCHITECT PRIOR TO ROUGH-IN. TYPICAL

P.A. SYS. J-BOXES, SEE RISER DIAGRAM

VERIFY MOUNTING HEIGHT W/ARCH. PRIOR TO ROUGH-IN

Pearl Library
24,598 sq. feet

floor
wall